

Congratulations on your purchase of a Town Food Water Boiler

Please read the complete instruction manual before using, and keep for future reference. When using this and all electric appliances, basic safety precautions should always be followed.

General Information

- Make sure the power complies with the voltage and plug the appliance into a grounded socket before use. Make sure this unit has a dedicated socket.
- Always use the appliance on a dry, firm surface, away from humidity and high heat. Failure to do so may result in unit failure.
- Fill the tank with cold water before plugging in the unit. **Do not let the unit run out of water while it is on or the unit could be damaged.**
- Water tank and heating element should be cleaned daily. If not cleaned often, deposits can build up and affect the performance of the unit and could cause power to cut out. Always unplug the unit before cleaning. Never immerse the appliance in water, as this could cause electric shock and/or destroy the unit.
- Do not use abrasive cleaning detergents. Make sure there is no residue from cleaning products or other foods/liquids on the heating elements. It can cause the unit to overheat.
- Be careful in handling the unit while it is on. The body and cover may get very hot and can cause burns if not handled properly.
- The unit must be unplugged before it can be reset. Once the appliance has cooled, press the reset button before turning it back on. If you do not do this, the light will come on, but the unit will not become operational, due to a thermal cut off switch to prevent overheating.
- Turn off the power and unplug after use.
- If you have any problems, consult Town Food at 800/221-5032.



Town Food Service Equipment Company, Inc.

718/388-5650 outside New York State 800/221-5032

Rev1-12/6/22