



1 UNSCREW NUT AND REMOVE WATER VALVE HANDLE.



2 REMOVE SCREWS HOLDING SINK.



3 LATCH ON BOTTOM OF FRONT PANEL. PULL DOWN TO UNHOOK. THERE MAY BE SEVERAL OF THESE.



4 TOP PORTION OF PANEL IS HOOKED ONTO TOP OF CHASSIS.



5 PULL BOTTOM PORTION OF PANEL AWAY FROM UNIT.



6 PUSH UP TO UNHOOK PANEL FROM TOP OF CHASSIS AND PULL AWAY FROM THE UNIT TO REMOVE PANEL.