 




TOWN



FOOD SERVICE EQUIPMENT CO., INC.
72 BEADEL STREET BROOKLYN, NY 11222



800/221.5032
718/388.5650



718/388.5860



customerservice@townfood.com



www.townfood.com

RM-50/RM-55 Gas Rice Cooker Sensor Replacement



1) The sensor is located on the underside of the rice pot. To change the sensor, turn pot over.

Rice pot must be cool before replacing sensor.



2) Use a flat head screwdriver to remove retaining ring, and replace the sensor.



Pictured above: A sensor with it's retainingring removed.



4) Remove the sensor.



5) Obtain a Sensing Element Kit, containing a retaining ring and a sensing element (no. 56854).



6) Place the sensing element into the pot, with the aluminum side facing into the pot, leaving the sensor exposed. Replace the retaining ring with a screwdriver.



7) Sensor should be snug and fit in place.