



## Rice Warmers & Sushi Rice Containers - Complete Parts List



<b>Model #</b>	<b>56912 56913</b>	<b>56916</b>	<b>56918</b>	<b>56919 56920</b>
RICE POT NON-STICK	-	56917	56930	56930
RICE POT NON-COATED	-	56917NC	56930NC	56930NC
INNER ALUMINUM LID	-	56921	56921	56921
INNER LID BUSHING	-	56922	56922	56922
FUSE	-	56926	56926	56926
INDICATOR LIGHT	-	-	-	56927
FEET	-	56928FT	56928FT	56928FT
LOWER LATCH ASSAMBLY	-	56929LL	56929LL	56929LL
UPPER LATCH ASSAMBLY	-	56929UL	56929UL	56929UL
REAR LOWER HANDLE	-	56929RLL	56929RLL	56929RLL
REAR UPPER HANDLE ASS'Y W/LIGHT	-	56929RUL	56929RUL	56929RUL
SIDE HANDLES	56912HL	-	-	-
THERMOSTAT / SENSOR	-	56933	56933	56933
REPLACEMENT COVER	-	56935	56935	56935
RICE PADDLE	57130S OR 22805			
ABSORB. SPONGE	56912P	-	-	-
SPONGE HOLDER	56912SH	-	-	-